



www.maineventspartyrental.com

1015 Brice St. Newark, Ohio 43055

Office 740-322-6355 Fax 740-322-6358

Karaoke Machine Instructions

1. Plug the supplied jumper cord into the Karaoke Machine.
2. Plug the other end into the "Video In" area on the back of your TV.
3. Turn your TV on to Channel 3 or 4.
4. Plug the Karaoke Machine into the wall power outlet.
5. Plug in one or both of the microphones into the machine.
6. Choose a song from the CD list, press play and adjust the volume accordingly.
7. You are ready to sing!

If you have questions with the operation of this equipment, we can be reached at 740-322-6355 during normal business hours,

***THANK YOU FOR RENTING FROM
MAIN EVENTS PARTY RENTAL.
HAVE A TERRIFIC EVENT***



www.maineventspartyrental.com

1015 Brice St. Newark, Ohio 43055

Office 740-322-6355 Fax 740-322-6358

Karaoke Machine Instructions

1. Plug the supplied jumper cord into the Karaoke Machine.
2. Plug the other end into the "Video In" area on the back of your TV.
3. Turn your TV on to Channel 3 or 4.
4. Plug the Karaoke Machine into the wall power outlet.
5. Plug in one or both of the microphones into the machine.
6. Choose a song from the CD list, press play and adjust the volume accordingly.
7. You are ready to sing!

If you have questions with the operation of this equipment, we can be reached at 740-322-6355 during normal business hours,

***THANK YOU FOR RENTING FROM
MAIN EVENTS PARTY RENTAL.
HAVE A TERRIFIC EVENT***