



Popcorn Machine

\$20 cleanup fee will be charged to any machine not returned in same condition received.

ELECTRICAL REQUIREMENTS: 15amp, 110v outlet

HOW TO OPERATE:

1. Turn kettle heat switch and kettle motor switch "On"
2. Let kettle heat up for 1-2 minutes
3. If using NAKPAKS sold by Main Events, add butter/oil half of package, and let heat for additional 1-2 minutes. (1 NAKPAK = Around 10 servings)
4. Add kernels to kettle and close lid.
5. Once popcorn slows to 1-2 pops per second, turn kettle motor switch "Off", and dump kettle into storage pan.
6. Repeat this cycle for each additional batch of popcorn. Subsequent batches are more flavorful than the initial batch.
7. Always keep kettle switch "Off" when not making fresh batch.

Motor air intake and exhaust holes on top of machine must be clear at all time to aid in cooling.

CLEANING:

- After kettle has cooled, unplug machine, wipe exterior of kettle down with hot wash cloth, with light soap added.
- Empty unpopped kernels in collection plate under storage surface, and wipe out.
- Be sure to wipe interior and exterior of machine down with cloth.

IMPORTANT: Do not submerge kettle in water to clean! Electrical components are located in bottom of kettle.

WARNING: DO NOT TOUCH kettle or bulb when machine is on, as both are hot and may cause serious injury.

If you have any questions regarding the operation of this machine, please call 740-322-6355 during normal business hours. Have a great event!

MAIN EVENTS PARTY RENTAL WILL NOT ASSUME ANY LIABILITY FOR INJURY DUE TO CARELESS HANDLING OR OPERATION OF THIS EQUIPMENT.