

# MAIN EVENTS

## PARTY & EVENT RENTAL

### 10'x10' Popup Canopy


**1** Place shelter in center of area to be sheltered. Remove cover. Have two people stand on opposite sides, grasp two outer legs. Lift off ground and step backwards, stopping at arms length.




**2** Grasp the bottom of the diamond (shown), on opposite sides. Lift up, and step backwards, until shelter is fully opened. *Be careful not to pinch fingers.*



**3** Engage the auto slider at each corner by pushing up with one hand, while holding the top of the leg with the other hand. Snap button will engage in the designated hole. Repeat on all other legs.

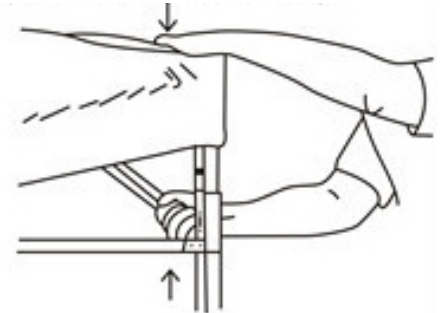

**4** Lift two adjacent outer legs up and pull out on the inner legs until the snap locks. Repeat on all legs. Raise or level the shelter using adjustment holes found near bottom of each outer leg.

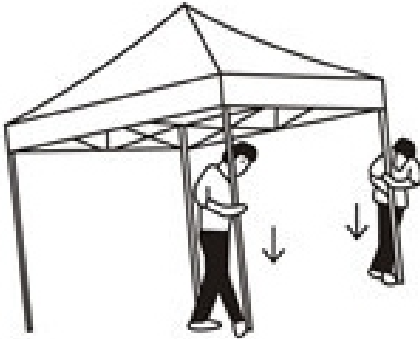

## IMPORTANT

### ALWAYS STAKE OR WEIGHT DOWN TENT

**HEAVY WIND:** Take tent down immediately

**WET FABRIC:** Let tent dry completely before closing or storing

**STORAGE:** Always use supplied bag when transporting or not in use

**RAIN:** Do not leave shelter unattended. If pooling occurs, remove by pushing up on bottom of top

*If you have any questions regarding the operation of this machine, please call 740-322-6355 during normal business hours. Have a great event!*