



Econo Floss Operating Instructions

\$20 cleanup fee will be charged to any machine not returned in same condition received.

ELECTRICAL REQUIREMENTS: 15amp, 110v outlet

HOW TO OPERATE:

1. Plug machine into outlet. Place bowl on top around head.
2. Flip power and heat switch to "ON" position.
3. With motor running, fill floss head around 90% full with floss sugar.
4. Turn heat to "HIGH." Cotton candy will start appearing within around 30 seconds.
5. Cotton candy should feel dry like hair. If damp, turn heat down. If you smell burning sugar, or see smoke, turn heat down.
6. If floss seems to be flying out of pan, bend the leather strips on head up.

TO MAKE CONE:

1. Hold paper cone between thumb and two fingers, and insert into floss.
2. Let a little floss build up on cone, then start to rotate around bowl.
3. Roll the cone along the bowl, rotating towards inside of bowl.
4. If making before event, place into bag, remove as much air as possible, seal bag.

CLEANING INSTRUCTIONS:

Wash floss pan and wipe down outside of machine and floss head with hot water.
DO NOT CLEAN INSIDE OF FLOSS HEAD.

If you have any questions regarding the operation of this machine, please call 740-322-6355 during normal business hours. Have a great event!

MAIN EVENTS PARTY RENTAL WILL NOT ASSUME ANY LIABILITY FOR INJURY DUE TO CARELESS HANDLING OR OPERATION OF THIS EQUIPMENT.