



Sno Cone Machine

\$20 cleanup fee will be charged to any machine not returned in same condition received.

ELECTRICAL REQUIREMENTS: 15amp, 110v outlet

HOW TO OPERATE:

You may use either ice or block ice in this machine. Be sure if you use the block ice that you break into pieces approximately 3 or 4 inches in size. If pieces are too large they will not fit into the chute. The chute is specially designed to automatically draw ice against the blades and does not require any manual effort.

1. Add ice into the ice chute, close or lower handle before turning motor on. Never add ice while motor is running. Continue adding ice until the desired quantity is chipped. **TURN THE MOTOR SWITCH OFF WHILE NOT IN USE.**
2. Pump desired syrup flavor onto cone. 1-2 pumps per cone.

OPERATING HINTS:

20 pounds of ice will produce 40-50 cones

It is easy to shave large quantities of ice quickly, be sure not to let the ice pile up in the case

Do not let children operate machine

Keep area dry around the machine

Keep machine out of sun to reduce melting

WARNING:

NEVER put your fingers or any objects into the ice chute while the motor is running. This may cause serious physical damage. All instructions should be followed carefully to avoid incident. Never allow any metallic or foreign objects to get into the ice chute. This could ruin the blade. Blades are ruined by ice picks, scoops, etc. Always be sure to unplug the machine before cleaning or servicing. **MAIN EVENTS WILL NOT ASSUME ANY LIABILITY FOR INJURY DUE TO CARELESS HANDLING OR OPERATION OF THIS EQUIPMENT.**

CLEANING INSTRUCTIONS:

Wash entire unit down with hot wild and light soap. For syrup pumps, do not disassemble. Pump hot water through until all syrup is gone from inside.

If you have any questions regarding the operation of this machine, please call 740-322-6355 during normal business hours. Have a great event!

MAIN EVENTS PARTY RENTAL WILL NOT ASSUME ANY LIABILITY FOR INJURY DUE TO CARELESS HANDLING OR OPERATION OF THIS EQUIPMENT.